


 **Electrolux**

Condenser Dryer  
**Instruction  
Booklet**

EDC 510E

 125 992 514





**Dear customer,**




Please read these operating instructions carefully and pay particular attention to the safety notes indicated on page 3 and 4.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

**Transport damages**

After unpacking the machine please check it is not damaged. If in doubt, contact your local Service Centre.

 
*The symbols you will see in this booklet have the following meaning:*

-  The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance.
-  The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.
-  Tips and information about economical and ecological use of the machine are marked with this symbol.

***Our contribution to the protection of the environment: we use recycled paper.***

**Contents**

<b>Important safety information</b> .....	<b>Use</b> .....
<b>Disposal</b> .....	• The control panel .....8-9
<b>Tips for environmental protection</b> .....	• Programme chart .....10
<b>Technical specifications</b> .....	• Operating sequence.....11
<b>Description of the appliance</b> .....	• Useful hints .....12
<b>Adjusting the level of conductivity</b> .....	<b>Maintenance and Cleaning</b> .....
<b>Installation</b> .....	• External cleaning .....13
• Unpacking .....7	• Cleaning the door .....13
• Positioning .....7	• Cleaning the filters .....13
• Electrical connection .....7	• Cleaning the condenser unit.....13-14
• Stacking kit .....7	• Emptying the water reservoir .....14
• Door reversal .....7	• Cleaning the air intake grille.....14
	• Cleaning the drum .....14
	<b>Something not working?</b> .....
	<b>Electrolux Warranty</b> .....



## Important safety information

 
*These warnings have been provided in the interest of safety. You MUST read them carefully before installing or using the appliance.*

### Installation

- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent tradesman.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

### Use

- This appliance is designed for domestic use only. If the machine is used for any other purpose or is not used correctly, the manufacturer accepts no responsibility for any damage that might occur.
- Tumble dryer is intended only for drying textile material, washed in water only.
- Always unplug the appliance after use.
- Clothes which are dripping wet should not be placed in the dryer.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in the tumble dryer. Items become warm, causing an oxidation reaction in the oil. Oxidisation creates heat. If the heat can not escape garments become hot and risk catching fire. Piling, stacking or storing oil affected items can prevent heat from escaping, creating a fire hazard.
- If fabrics that contain vegetable or cooking oil or have been contaminated by hair care products are placed in a tumble dryer, they should be washed first in hot water with extra detergent. This will reduce, but not eliminate the hazard. The cool down cycle should be used to reduce the temperature of the garment. Garments should not be removed from the tumble dryer, piled or stacked while hot.
- Items that have been previously cleaned, washed, soaked or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in the tumble dryer.
- Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers.
- Items containing foam rubber (also known as latex foam) or a similar textured rubber, should not be dried in a tumble dryer on a heat setting.
- Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate static electricity unless this practice is specifically recommended by the fabric softener or product manufacturer.
- Undergarments that contain metal reinforcements should not be placed in the tumble dryer.
- Damage to the tumble dryer can occur if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in the tumble dryer.
- Rubber backed articles, clothes fitted with foam rubber pads, pillows, gumboots and rubber coated tennis shoes should not be placed in the tumble dryer.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluids etc). These substances are volatile and can cause an explosion. Only tumble dry items washed in water.
- Ensure no gas lighters have been accidentally left in pockets of garments.
- Do not dry canvas shoes or sport shoes, as they could get stuck between the door and the drum.
- Leave the door slightly ajar when the tumble dryer is not in use. This allows the seal to be preserved.
- Clean lint filters after use, to prevent the risk of fire. **Do not use the dryer if the lint filters are damaged or missing.**
- Do not allow lint to accumulate around the dryer.



### General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your **local Electrolux Customer Service on 131349**. Always insist on genuine spare parts.
- Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can cause suffocation and be dangerous to children. Keep them out of children's reach.
- Make sure children and pets do not climb into the drum.


### Child safety

- The appliance is not intended for use by young children or infirm persons without supervision.



### Disposal

#### • Packaging materials

The materials marked with the symbol  are recyclable.

This means they be recycled properly by disposing of them in appropriate collection containers.

#### • Machine

 
Use authorised disposal sites for your old appliance. Help keep Australia tidy!



### Tips for environmental protection


To save energy and to help protect the environment, we recommend that you follow these hints:

- Try and load the machine to maximum capacity, **small loads are uneconomical**.
- Always load well spun garments. The higher the spin speed, the lower the electricity consumption and shorter the drying times.
- Do not over dry garments, this avoids creasing and saves energy.
- To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.




## Technical specifications

DIMENSIONS:	Height	85 cm
	Width	60 cm
	Depth	58 cm
ELECTRICAL CONNECTION:		220/240 V/50 Hz
MAX. POWER ABSORBED:		2200 W
MIN. FUSE RATING:		10 A
MAX. DRYING CAPACITY:	Cotton, linen	6 kg
	Synthetics	2.5 kg

 This appliance complies with the following E.E.C. Directives:  
 - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;  
 - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

## Description of the appliance

- 1 Control panel
- 2 Programme guide
- 3 Lint Filters
- 4 Rating Plate
- 5 Consenser Unit
- 6 Water reservoir
- 7 Adjustable feet

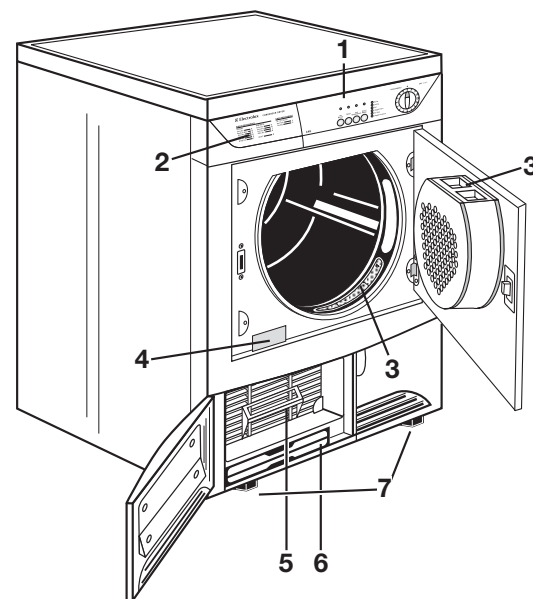

## Adjusting the level of conductivity

Water contains a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values.


Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle.

Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water by using the following procedure.

### To access adjustment mode:

Turn the programme selector dial to switch on the appliance. In selection mode, press simultaneously the buttons **1** and **3**.

Press the buttons down until the pilot lights above each ones begin to flash and one of the pilot lights indicating the drying phase lights **Drying**, cooling **COOLING**, or end cycle **END** remains lit.

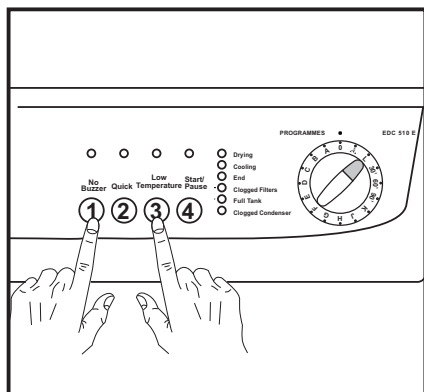

### Adjusting the level of conductivity:

Press the START/PAUSE button sequentially: the level of conductivity is indicated by the phase pilot lights, which light in various combinations as follows:

LED lit	Conductivity	Approximate value $\mu\text{S}/\text{cm}$
<b>END</b>	Low	< 300
<b>COOLING</b>	Medium	300 - 600
<b>Drying</b>	High	> 600

Normally, the appliance is factory-set to the highest level; however, certain models may be configured differently.

### Memorizing the new setting:


Simultaneously press the buttons **1** and **3**. Press the buttons down until the pilot lights above each ones stop flashing and the buzzer sounds.

## Installation

### Warning!

#### Unpacking

- Slide out the polythene bag with the polystyrene stuffing before using the appliance.
- Pull off adhesive strips from inside machine on top of drum

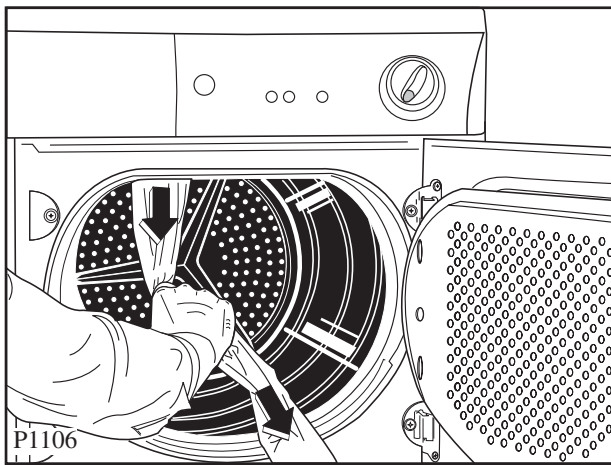

- !** Should the appliance be moved, it must be transported vertically.

#### Positioning

It is recommended for your convenience, the machine is positioned close to your washing machine.

The tumble dryer must be installed in a clean place, where dirt does not build up.

Air must be able to circulate freely around the appliance. Do not obstruct the front ventilation grille or the air intake grille at the back of the machine.

Keep the vibration and noise to a minimum. When in use the dryer should be placed on a firm, level surface.

Once the dryer is on its permanent operating positioning, check the dryer is level with the aid of a spirit level. If it is not, raise or lower the levelling feet.

**The feet must never be removed.**

**Do not restrict the floor clearance through deep pile carpets, strips of wood etc. This can cause heat build up which can interfere with the operation of the appliance.**

#### Important

The hot air emitted by the tumble dryer can reach temperatures up to 60°C. The appliance must not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the room temperature must be no lower than 5°C and no higher than 35°C. This can affect the performance of the dryer.

#### Electrical connection

This machine is designed to operate on a 220-240 V, single-phase, 50 Hz supply.

Check your domestic electrical installation can take the maximum load required (2.2kW), also take into account any other appliances in use.

Connect the machine to an earthed socket, in accordance with current wiring regulations.

**CAUTION:** If the appliance is supplied with a cord extension set of an electrical portable outlet device, it must be positioned so it is not subjected to splashing or ingress of moisture.


- !** The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.

#### Important!

The power supply cable must be accessible after installing the machine.

#### Stacking kit

Stacking kits are available through your dealer. This enables the mounting of the dryer on top of your front loading Electrolux washing machine, with cover's depth between 40 and 60 cm.

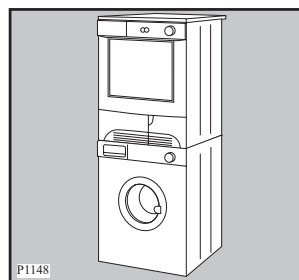

#### Door reversal


To make it easier to load or unload the laundry the door can be reversed.

**This operation must be carried out by qualified personnel.**

Please contact the nearest Service Centre.

## Use

### The control panel

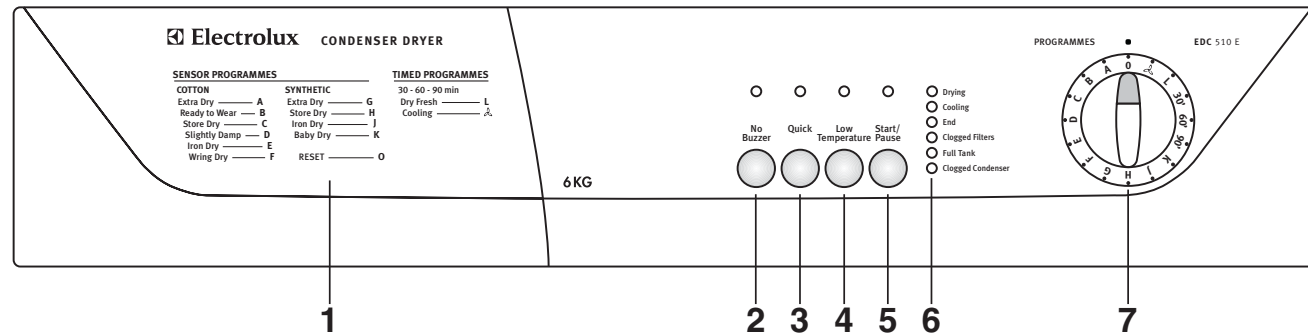

#### 1 Programme Guide

This will help you to select the correct programme for drying.

#### 2 NO BUZZER button

A buzzer sounds

- when selecting the programme
- when depressing the buttons
- when an incorrect option selection is made
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
- at the end of the programme and during the anticrease phase
- when the water reservoir is full
- if the machine is not working correctly
- when the door of the appliance or the small door at the bottom are open

By depressing **NO BUZZER** button the acoustic signal is switched off in the same cases mentioned above.

The corresponding light comes on.

#### 3 QUICK button

By depressing this button the drying time is reduced in the following COTTON programmes:

- EXTRA DRY (Progr **A**)
- READY TO WEAR (Progr **B**)
- STORE DRY (Progr **C**)

The corresponding light illuminates. This option **cannot** be selected together with the LOW TEMPERATURE function.

#### 4 LOW TEMPERATURE button

Pressing this button allows the drying of delicate items at a lower temperature.

The corresponding pilot light comes on.

This option can also be used for time controlled drying.

This function **cannot** be used with QUICK.

#### 5 START/PAUSE button

 
Press this button to start the dryer after having selected the programme and the options. The relevant light will stop flashing.

**If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.**

**This button must be depressed also after a power failure and after having re-inserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of the FULL TANK light.**

In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.





## 6 Indicator lights

These lights indicate the following functions:

### **DRYING light**

This light indicates that the appliance is in the drying phase.

### **COOLING light**

This light indicates the appliance is in cooling phase. At the end of the drying cycle, there is a 10 minute cooling phase to cool the garments.

### **END light**

This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.

### **CLOGGED FILTERS light**

The light illuminates at the end of the program to remind you the filters must be cleaned.

### **FULL TANK light**

The light comes on at the end of the programme to remind you the water reservoir must be emptied. If the light illuminates during the program the water reservoir is full. The buzzer sounds, the program stops and the Start/Pause button flashes.

### **CLOGGED CONDENSER light**

The clogged condenser light comes on after every 80 cycles to remind you the condenser needs to be cleaned.

## 7 Programme/Time selector dial

Allows you to select electronically controlled or time controlled drying.

Turn the dial to the required programme or time.

### **Electronically controlled drying (automatic)**

The dryer runs these programs with the help of probes, which detects the degree of dampness of the garments.

Simply select the program according to the type of garment and the degree of drying required.

 
 
 
### **Time controlled drying**

Can be used to finish off drying if necessary.

Select the 90 or 60 minute programme for cottons or the 30 minute programme for synthetics.

To cancel a programme which is running, turn the programme selector dial to "0".

At the end of drying, turn the selector dial to "0" to switch the machine off before removing the laundry.



## Programme chart

### Automatic drying (electronic programmes)

Type of laundry	Degree of drying / Programme	Max-load <sup>(1)</sup>	Possible options
COTTON	EXTRA DRY (A)	6 kg	QUICK - LOW TEMPERATURE
	READY TO WEAR (B)	6 kg	QUICK - LOW TEMPERATURE
	STORE DRY (C)	6 kg	QUICK - LOW TEMPERATURE
	SLIGHTLY DAMP (D)	6 kg	LOW TEMPERATURE
	IRON DRY (E)	6 kg	LOW TEMPERATURE
	WRING DRY (F)	6 kg	LOW TEMPERATURE
SYNTHETICS	EXTRA DRY (G)	2.5 kg	LOW TEMPERATURE
	STORE DRY (H)	2.5 kg	LOW TEMPERATURE
	IRON DRY (J)	2.5 kg	LOW TEMPERATURE
JUMPERS	BABY DRY (K)	1 kg (10 baby jumpers)	LOW TEMPERATURE
Jackets, trousers, dresses, skirts.	DRY FRESH (L)	1 - 4 garments	LOW TEMPERATURE

(\*) According to CEI 1121 Standards.

- **BABY DRY** cycle is a special programme for jumpers to be dried "ready to wear".
- **DRY FRESH** cycle is designed to clean and freshen garments labelled "dry clean only" at home, in your tumble dryer, using the special product available on the market.

### Timed programme

Type of laundry	Drying time	Max-load <sup>(1)</sup>	Programme selector dial position	Possible options
Cotton	90 min	6 kg	90'	LOW TEMPERATURE
Cotton	60 min	6 kg	60'	LOW TEMPERATURE
Synthetics	30 min	2.5 kg	30'	LOW TEMPERATURE

(1) Never overfill the drum (do not load large quilts, for example).

Drying times vary according to:

- The type of laundry
- The size of the load
- The degree of spinning prior to drying
- The degree of dryness.

### COOLING

This position on programme selector dial can be used to freshen the laundry (e.g. to remove a persistent odour of moth-balls). Programme duration 10 mins.

### Load

It is often difficult to estimate the weight of items to be dried. We therefore recommend that you adopt the following guidelines:


- **cotton, linen:** drum full but not too tightly packed;
- **synthetics:** drum no more than half full;
- **delicate fabrics:** drum no more than one third full.

## **i** Operating sequence

Before using your tumble dryer for the first time, we recommend to place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

### Drying

1. Connect the appliance.
2. Open the door.

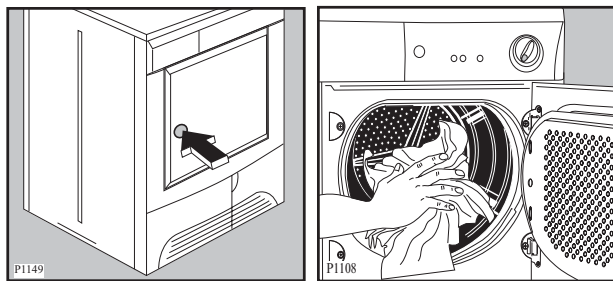

3. Load the items one at a time, shaking them out loosely.
4. Close the door. Check the laundry does not get caught between the door and filter.
5. Select the drying programme or time. The lights DRYING, COOLING and END come on.
6. If required, press the LOW TEMPERATURE button and/or the NO BUZZER button or the QUICK button.
7. Press the START/PAUSE button: the corresponding light stops flashing and drying starts. Only the DRYING light remains lit.

If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound (if the NO BUZZER option has not been selected) and the programme phase indicator lights will flash.

The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (COOLING light is on). You may remove the laundry after this phase.

The lights END, CLOGGED FILTERS and FULL TANK illuminate and the buzzer sounds.

8. If the laundry is not removed at the end of the cycle, the dryer performs an **anti-creasing** phase and an acoustic signal can be heard (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase. Lights END, CLOGGED FILTERS and FULL TANK remain lit and the buzzer sounds for 2 minutes.

9. Turn the programme selector dial to "O"; all the lights go out. The appliance is switched off. Remove the laundry.

**If you open and then close the door before turning the selector dial to "O" all the lights corresponding to the phases making up the performed programme come on.**

### After each use

- Clean the filters (see page 13).
- Empty the water reservoir (see page 14).

### Important!

If the drying program has to be stopped before it reaches cycle end, we recommend you turn the program selector dial to the cooling position and wait till the end of its cooling phase before removing the garments. This will avoid the build-up of heat inside the appliance. To do this first turn the dial to «0» and then to the cooling program, depress Start/Pause button.





### Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to "O". Select the new programme and press the START/PAUSE button.

## Useful hints

- Try to load to the maximum capacity of the machine as small loads are uneconomical. For information, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000 g
Tablecloth	400 - 500 g
Kitchen towel	70 - 120 g
Table napkin	50 - 100 g
Towelling hand towel	150 - 250 g
Bathrobe	1000 - 1500 g
Men's shirt	200 - 300 g
Pillowcase	100 - 200 g
Men's pyjamas	400 - 500 g
Ladies' nightdress	200 - 250 g

- Never tumble dry the following:  
Delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.
- Always follow the instructions on garment labels:
  -  may be tumble dried
  -  normal drying (high temperature)
  -  delicate drying (low temperature)
  -  do not tumble dry
- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.

- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items** e.g. shirts, should be briefly pre-spun before drying (depending on the crease resistance approx 30 seconds).
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also place starched items into your dryer. However, to achieve the desired starch effect, choose the program «iron dry». To remove any starch residue, wipe out the internal drum after drying with a moist cloth and rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a 30 minute post drying time. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc).

## Maintenance and Cleaning

You must **disconnect** the dryer from the electricity supply before carrying out any cleaning or maintenance work.


### External cleaning

Use soap and water only, dry thoroughly.

**Important:** do not use methylated spirit, diluents or similar products.

### Cleaning the door

Clean periodically the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying.

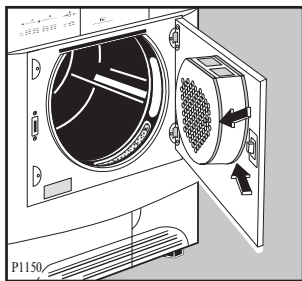


### Cleaning the filters

Your dryer will only function well if the filters are clean.

The filter collects lint accumulated during drying. The filter must be cleaned **at the end of each program**.

The CLOGGED CONDENSER light is on to remind you of this operation.

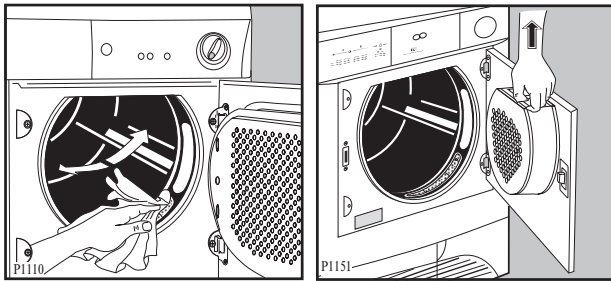


The filter in the inner door must be removed for cleaning.

Do not be alarmed by the amount of lint, it is not due to excessive wear caused by the dryer. All fabric loses lint when drying but it goes unnoticed in the air.

In a tumble dryer it collects in the filter.

After a while a whitish pattern due to detergent residue forms on the filters. When this occurs, clean the filter with warm water using a brush.

Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right.).

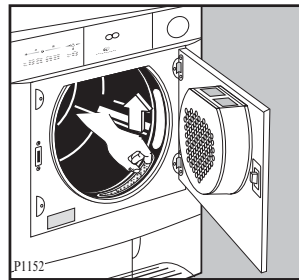


**!** Do not use the appliance without filters.

### Cleaning the condenser unit


Clean the condenser when the CLOGGED CONDENSER light comes on.

The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture.

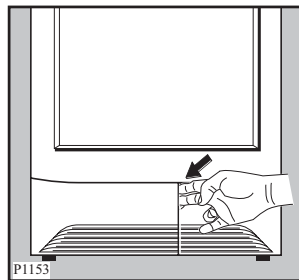


During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser insertion.

To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding the handle.

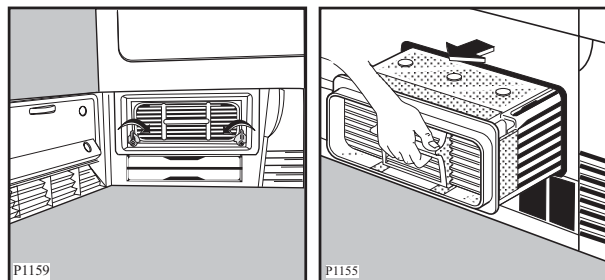

Clean with a brush, and rinse under a hand shower if necessary.

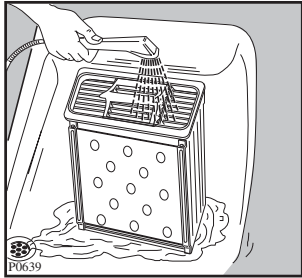


Also clean the outside, removing all fluff.

Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.

**Important!** Do not use pointed objects or utensils to clean the spaces between the plates, this could damage the condenser.

Re-fit the condenser, turn the red stops upwards and close the door.

 **Do not use this appliance if the condenser has not been fitted.**

### Emptying the water reservoir

Water extracted from the laundry condenses inside the machine and is collected in a reservoir.

The reservoir must be emptied after each drying cycle to ensure efficient operation when the dryer is in use.


If this is not done the safety device trips: pilot light full tank on the control panel comes on and the program stops, leaving the laundry damp.

The reservoir can be emptied even in the middle of a programme.

Proceed as follows:

- Open the small door at the lower part of the cabinet
- Turn the yellow stop upwards
- Pull out the reservoir
- Open the small cover and let the water flow down
- Close the small cover and re-insert the reservoir.

- Push the reservoir until it clicks and turn the yellow stop downwards to lock it firmly in.
- Close the small door and press the START/PAUSE button again to allow the programme to continue.

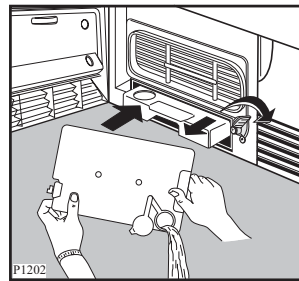

**Handy tip:** The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. through a coffee filter).

### Cleaning the drum

When your garments do not reach the desired degree of dryness, e.g. It turns out either too dry or too damp, we advise you clean the inside of the drum with a cloth soaked in vinegar.

This will eliminate the pattern formed in the drum (due to residues of detergent and softeners used in the washing and lime contained in the water).

## Something not working?

Before contacting your local Service Centre, please make the following checks:

**Important!**

If during the drying phase the END pilot light starts blinking and the buzzer sounds, please switch your tumble dryer off and contact your local Service Centre.

Problem	Possible cause
<ul style="list-style-type: none"> <li>• <b>The dryer does not work:</b></li> </ul>	<ul style="list-style-type: none"> <li>• The door(s) is(are) open.</li> <li>• The plug is not fitted into the wall socket.</li> <li>• There is no electricity supply from the wall socket.</li> <li>• The selector dial is not set correctly.</li> <li>• The water reservoir is full or not correctly inserted (FULL TANK pilot light is on). The programme starts in any case but it stops after approx. 4 minutes.</li> <li>• The START/PAUSE button has not been depressed.</li> </ul>
<ul style="list-style-type: none"> <li>• <b>The dryer does not dry properly:</b></li> </ul>	<ul style="list-style-type: none"> <li>• The filters are clogged.</li> <li>• Drum needs cleaning, refer to page 13.</li> <li>• The condenser is clogged.</li> <li>• The water reservoir is full.</li> <li>• The selected cycle is not suitable for the laundry.</li> <li>• Insufficient drying time.</li> <li>• The laundry has not been spun properly.</li> <li>• The low temperature function has been selected.</li> <li>• Excessive laundry load.</li> <li>• The dryer is not correctly installed.</li> </ul>

If, after the above checks, there is still a fault, call your **local Electrolux Customer Service on 131349**.

Please make sure you give the model and serial number of the appliance.  
This information can be found on the rating plate (see picture of page 5).

# Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: ELECTROLUX DRYER

**This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.**

## General Terms and Conditions

1. In this warranty
  - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - (c) 'Warranty Period' means
    - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of '24' months and in New Zealand the period of '24' months;
    - (ii) where you use the Appliance for commercial purposes, the period of '0' months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty. This warranty extends only to the original purchaser and is not transferable except with the consent of Electrolux in writing.

8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):

- (a) The Appliance is damaged by:
  - (i) accident
  - (ii) misuse or abuse, including failure to properly maintain or service
  - (iii) normal wear and tear
  - (iv) power surges, electrical storm damage or incorrect power current
  - (v) incomplete or improper installation
  - (vi) incorrect, improper or inappropriate operation
  - (vi) insect or vermin infestation.

(b) The Appliance is modified without authority from Electrolux in writing.

(c) The Appliance's serial number or warranty seal has been removed or defaced.

(d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.

9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the State where the Appliance is purchased if the Appliance is purchased in Australia or the law applicable in New Zealand if the Appliance is purchased there. Where the Appliance is purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

## Limitation of Liability

10. To the extent permitted by law:

(a) Electrolux excludes all warranties other than as contained in this document;

(b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.

11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so),:

(a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or

(b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;

and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

## Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

 
## Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p><b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SERVICE CENTRE IN AUSTRALIA <b>Please call 13 13 49</b> <small>For the cost of a local call (Australia only)</small></p>	<p><b>SERVICE AUSTRALIA</b>  <b>ELECTROLUX HOME PRODUCTS</b></p>	<p><b>FOR SPARE PARTS</b> OR TO FIND THE ADDRESS OF YOUR NEAREST STATE SPARE PARTS CENTRE IN AUSTRALIA <b>Please call 13 13 50</b> <small>For the cost of a local call (Australia only)</small></p>
---	--	---

<p><b>FOR SERVICE</b> OR TO FIND THE ADDRESS OF YOUR NEAREST AUTHORISED SERVICE CENTRE IN NEW ZEALAND <b>Free call 0800 10 66 10</b> <small>(New Zealand only)</small></p>	<p><b>NEW ZEALAND SPARE PARTS CENTRES</b>  <b>AUCKLAND</b> Prime Distributors Ltd. 8 Highbrook Drive, East Tamaki.....(09) 273 3580  <b>WELLINGTON</b> Prime Distributors Ltd. 68 Victoria Street, Petone.....(04) 586 2150  <b>CHRISTCHURCH</b> Prime Distributors Ltd. Unit 1, 127 Montreal Street.....(03) 377 1009                  R. Redpath Ltd. 55 Ferry Road.....(03) 379 0446  <b>DUNEDIN</b> South City Champion, 590 Hillside Road.....(03) 455 5443   <b>ELECTROLUX HOME PRODUCTS</b></p>
--	--





 **Electrolux**

