

*Thinking of you*

 **Electrolux**

USER MANUAL

**Tumble Dryer**

EDV505, EDV605

# Contents

Important Safety Instructions		Use	
Dryer Safety	Page 2	The Control Panel	Page 5
Fire Hazards	Page 2	Operating Sequence	Page 6
Cleaning the Lint Filter	Page 3	Hints	Page 8
Drying Guide	Page 3	Troubleshooting & Accessories	Page 9
Installation Instructions	Page 4		


## Important Safety Instructions

### DRYER SAFETY


Failure to follow these safety instructions could damage the dryer or your clothes.

**You may then not be covered by warranty for this damage.**

Only plug this appliance directly into an AC power supply, which is properly earthed and has the correct voltage. See the serial number sticker located on the bottom of the door opening for voltage information.

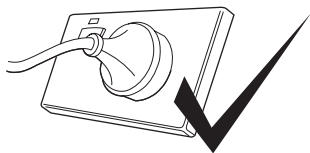

**CAUTION:** If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture. For safety reasons we strongly advise against the use of double adaptors, extension cords or power boards.

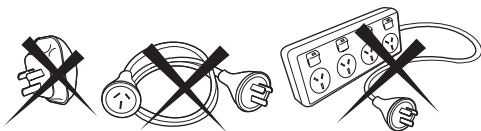

This tumble dryer is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** If the electrical cord of this appliance is damaged, it must be replaced by the Manufacturer, Authorised Service Centre or similarly qualified person in order to avoid a hazard.

**These dryers are for drying clothes, towels and linen. Do not use them for any other purpose.**

### FIRE HAZARDS

Some fabrics are not suitable for tumble drying. The following **MUST NOT** be placed in your dryer due to the risk of a fire or an explosion:

- Items that have been spotted or soaked with **vegetable oil, cooking oil, suntan oil, linseed oil, salad oil, lubrication oil or grease**. Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If heat cannot escape, the items can become hot enough to ignite. Piling, stacking, or storing oil-affected items can prevent heat from escaping and create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil, or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The "cool down" cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled while hot.
- Items that have previously been cleaned in, washed in, or spotted with **petrol/gasoline, industrial chemicals used only for cleaning, dry-cleaning solvents or other flammable or explosive substances are highly flammable**. Highly flammable or explosive commonly found around the house include acetone, (nail polish remover) denatured alcohol, petrol/gasoline, kerosene, some spot removers, turpentine, waxes and wax removers **should not be put in the dryer. Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials. Foam rubber materials can produce fire by spontaneous combustion when heated.**
- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, rubber boots and rubber-coated sports shoes.

For your safety, and to reduce the risk of fire or an explosion, **DO NOT store or use petrol or other inflammable vapours and liquids near your dryer.**


# Important Safety Instructions

## CLEANING THE LINT FILTER


### LINT BUILD-UP IS A FIRE HAZARD

A clean lint filter reduces drying times, saves energy and avoids overheating. Overheating may also damage your clothes.

### What happens if I forget to clean the lint filter?

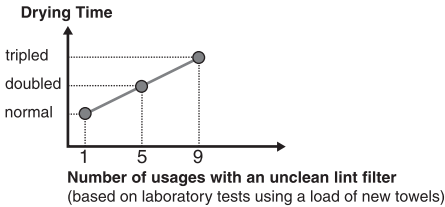


The lint filter is located at the front of your dryer at the bottom of the door opening.

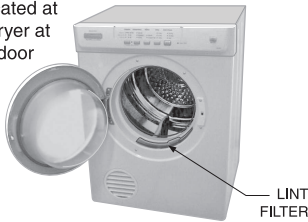

### You must clean this lint filter after every load.



To remove the lint filter open the door and press the two pads together. Pull the lint filter out of the pocket.

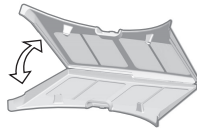

Open apart the lint filter and wipe or peel off the lint.

Ensure the lint filter "clicks" when replacing. It can be inserted into the pocket either way.

- Never operate your dryer without the lint filter.
- Do not allow lint to build up around your dryer.
- A torn or damaged lint filter must be replaced immediately.
- Overloading can increase lint build-up because the airflow is reduced.

To avoid potential fire hazards, we recommend that you pay a qualified service technician to periodically clean your dryer. You must do this also when you change your mounting from upright to inverted, or vice versa.

## DRYING GUIDE

Your load, when dry must not exceed the rated capacity.

- 5 kg for the EDV505 dryer
- 6 kg for the EDV605 dryer

(See page 8 for a table of average weights of laundry items)

Always check your labels for the drying symbols which the International Care Labelling Code now uses.



- **Permanent press and synthetics** - take out as soon as the dryer stops to reduce wrinkles.
- **Woollen articles** - not recommended. Pull them to their original shape, then dry them flat.
- **Woven and loop knit materials** - may shrink, by varying amounts, depending on their quality. Do not use the "Normal" setting for these fabrics. Always stretch them out immediately after drying.
- **Fibre or leather materials** - always check the manufacturer's instructions.
- **Baby clothes and night gowns** - acrylic clothing or sleepwear use only on the "Delicates" setting.
- **Rubber and plastics** - Do not dry any items made from or containing rubber or plastics, such as aprons, bibs, babies' waterproof napkins, curtains, tablecloths, shower caps, clothes fitted with foam rubber pads, pillows, galoshes, or rubber coated tennis shoes.
- **Fibreglass** - not recommended. Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer, and irritate your skin.

Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.

**Note: We strongly advise against the use of fabric conditioners of the sheet type that are added to the clothes in the drum. These products may lead to rapid blockage of the lint filter and inefficient operation of your dryer.**

# Installation Instructions


You can choose to put your dryer:

- on the floor.
- on a work bench.
- on a wall, upside down or upright, using the included mounting kit.
- on top of a front load washing machine (using a stacking kit available as an optional extra).

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such away that a full opening of the tumble dryer door is restricted.

## Stacking Kit

You can use a stacking kit if you want to mount your dryer on top of a Electrolux front load washing machine. Use kit part number DKSK03. Refer to the kit instructions on how to install.

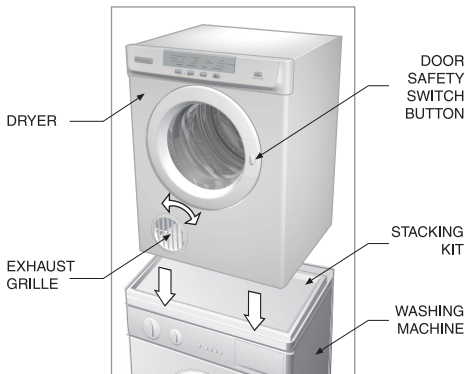


The exhaust grille has a range of positions, which allows you to select the optimum exhaust air angle. Simply hold the grille and rotate it until it hits the built-in stop.



## Trim Insert

You can invert the trim insert when you want to mount your dryer upside down on the wall.

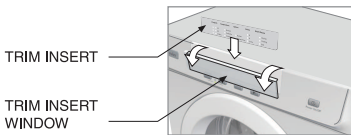

Unclick the cover trim insert window from the panel, then insert the trim insert and clip back (trim insert reverse included in package).

**Do not install your dryer in a cupboard or small un-vented laundry unless you are using a venting kit.**

There are 2 VENTING OPTIONS

- front
- rear-using a venting kit (optional extra)


## Venting Kit

DVK005 - Through the wall


DVK006 - Universal flexible hose

**Important:** Use only kits approved by Electrolux Home Products Pty. Ltd. with your dryer. Contact the Electrolux Home Products Pty. Ltd. Spare Parts Centre for the list of approved kits. The exhaust duct must not exceed 2 metres in length at 100mm diameter. If connecting the dryer to a common ducting system, safety advice should be requested from the manufacturer.

If you choose to use the optional vent kit, the exhaust grille at the front of the dryer will need to be replaced with the outlet cover from the back of the dryer. Gently prise open the grille, using a thin bladed tool. Next, remove the cover from the back and clip it into the grille space at the front. The exhaust grille is not required when using a vent kit.

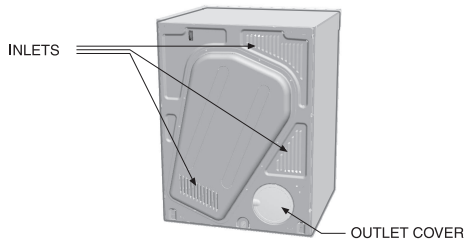

You can position the vent kit at the back of the dryer to remove air upwards or sideways.

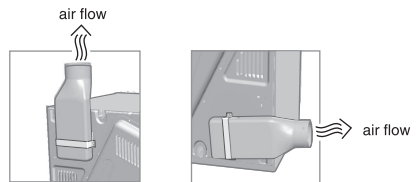


Inlet and outlet points need clear airflow to prevent overheating, so ensure there is adequate ventilation. (i.e. open window or external door.)

If a venting kit is used and the exhaust is discharged out of the room, there must be adequate ventilation to avoid the back flow of gases in to the room from appliances burning other fuels, including open fires, when operating the tumble dryer. This is not applicable where a venting hose is directed to an open window. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

# Use

## THE CONTROL PANEL

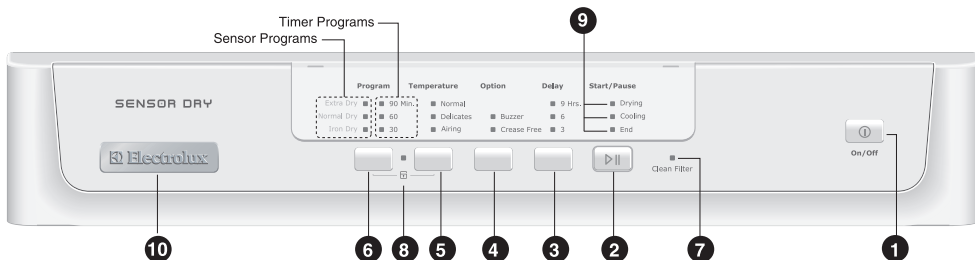

### 1 On/Off Button

This button switches the dryer on. At the end of the program, press the button again to switch the dryer off.

### 2 Start/Pause Button

This button allows you to start or pause the dryer to check the contents of the load or perhaps add more clothes to the load.

**NOTE: It will not start or restart a program unless the door safety button has also been pressed in. If the safety button is not pressed in a door switch fault will be indicated (sound "beeps" 6 times).**

### 3 Delay Button

This button is a feature that permits you to start the dryer after a defined number of hours, ranging from 3, 6, and 9 hours.

To abort the Delayed Start, press the **Start/Pause** button, which puts the machine into paused mode, allowing you to change the delay time.

**NOTE: Make sure you have set the desired program before setting the delay.**

### 4 Option Button

This button allow you to select Buzzer and Crease Free.

#### Buzzer:

The Buzzer feature is designed to remind you when the program ends with a "beeps" sound.

#### Crease Free:

The Crease Free feature is designed to help prevent creases forming in the clothes after the normal drying cycle has finished. The drum will rotate about 5 seconds every minute and will go for 3 hours. This is useful if you are unable to empty the dryer straight away.

Each successive press will cycle through the options as below.

**Buzzer --> Crease Free --> Buzzer and Crease Free**

↑----- No Options Selected ----->

### 5 Temperature Button

Is used to select one of the three settings, Normal, Delicates or Airing. The Delicates setting will cause the heater to cycle on for less time than the Normal setting.

The heater on/off cycling time will vary on both settings depending on the program selected, ambient temperature etc.

On the Airing setting the heater is not used at all. A new setting can be selected when the dryer is running, the drying process will continue using the new setting.

**NOTE: Airing cannot be selected when one of the Sensor programs has been selected.**

### 6 Program Button

Is used to select the desired program. Programs available are:

#### Sensor Programs:

**Extra Dry, Normal Dry and Iron Dry.**

#### Timer Programs:

**90 min, 60 min and 30 min.**

A new program can be selected when the dryer is running, the drying process will continue using the settings from the new program. If the program is changed from a Manual program to a Sensor program then an ambient check may occur.

**NOTE: When the temperature setting is on Airing the Sensor programs cannot be selected.**

### 7 Reminder Clean Filter LED

The LED is illuminated at the end of the program.

The LED is designed as a reminder to clean the lint filter at the end of each load.

# Use

## THE CONTROL PANEL (Continued)

### 8 Child Lock ( — □ — )

The child lock option is used to stop the settings being changed once a program has been started. It does not affect the On/Off switch.

To select this option press and hold the **Program** and **Temperature** button together (while the dryer is running) until a beep is heard and the Child Lock LED illuminates for approx 2 seconds. To turn the child lock off press and hold the same buttons (while the dryer is running) until a beep is heard and the LED goes off.

Hold the **Program** and **Temperature** button together.



**NOTE: If the door is opened during the program the Child Lock option will be de-activated and will have to be reset once the dryer has been restarted.**

### 9 Progress indicator lights

These indicators show at which part of the cycle your machine is, the Drying or Cooling cycle or the End.

### 10 Electrolux Name Badge

You can invert the name badge when you want to mount your dryer upside down on the wall. Use a suitable tool (such as a thin bladed tool). Unclip the badge from the panel, invert and clip back.

## OPERATING SEQUENCE

1. **Load** your dryer loosely until it is no more than **TWO THIRDS FULL**. Clothes must tumble freely in a dryer. Don't cram them in. Wet clothes fluff up when dry.

#### Overloading will:


- Reduce efficiency
- Increase drying time
- Increase the risk of creasing




**Do not load clothes or other articles which are dripping wet or have sand and grit on them into your dryer.**

### 2. Switch On

The dryer will not operate unless the door safety switch button is fully pressed in.

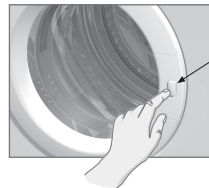

3. **Press** then release the **On/Off** button on the sensor control panel. You are now ready to select your drying Program.

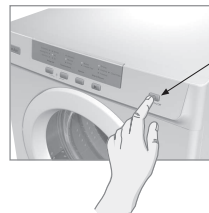

You can use your dryer 2 ways

1. Sensor Program
2. Timer Program



# Use

## OPERATING SEQUENCE (continued)

### 1. Sensor Program

This mode gives you the option of selecting different drying levels from the **Sensor Program**.



1. Press the **Program** button to select either **Extra Dry**, **Normal Dry** or **Iron Dry** from the **Sensor Program** button.



The indicator light will come on to your choice.

Do not select the **Extra Dry** option for delicates fabric such as polyester as shrinking may occur.

### Temperature



2. Press the **Temperature** button to select either **Normal**, or **Delicates** from the **Temperature** program.

**Airing** is not available in **Sensor Program**.



The indicator light will come on to your choice.

Refer to the table below for recommendations.

Temperature	Definition
<b>Normal</b>	For drying most fabrics.
<b>Delicates</b>	For drying delicates and synthetics. It is lower heat for the maximum care of the fabrics.
<b>Airing</b>	This setting does not heat. Only circulate the air as the dryer to shake out the dust and refresh the clothes.

Now press the **Start/Pause** button to start the dryer.

### 2. Timer Program

Using this mode gives you the option of selecting a number of features from the **Timer Program** including the Temperature you require.

### Program



1. Press the **Program** button to select either **90**, **60** or **30** Minutes from the **Timer Program**.



The indicator light will come on to your choice.

### Temperature



2. Press the **Temperature** button to select either **Normal**, **Delicates** or **Airing**.

The indicator light will come on to your choice.

Now press the **Start/Pause** button to start the dryer.

### 4. Switch Off

- When you have finished using the dryer, press the **On/Off** button, to turn off the power, then switch off at the power point. It is not recommended that the power be left on to the dryer.

### 5. Clean Lint Filter

- After every load clean the lint filter to reduce drying times and avoid overheating.

### Checking the Load

To check the dryness or add clothes during the cycle, simply open the door. The dryer will beep several times indicating the door is open. If further drying is required, close the door and push in the door safety switch button, then press the **Start/Pause** button to continue.

**For the best drying performance, only add or remove clothes near the beginning of the drying cycle.**

### Cooling

Your dryer will automatically switch off the heater at the end of every drying cycle. The cooling light will come on. This is important as it removes stored heat from the clothes and helps prevent creasing.

At the end of cooling the buzzer will sound to indicate your clothes are dry (unless you have de-selected this function). It will sound again after about fifteen minutes. The Clean Filter Reminder light will remain on.

The progress indicator lights let you know what the dryer is doing, either drying, cooling or finished.

### Last Memory Setting

Next time you turn your dryer on it will be ready to go as it remembers the last Program, Temperature and Option setting used. You can change the settings if you wish.

### Reversing Action

The drum is designed to rotate in each direction, clockwise and anti-clockwise. This reduces tangling and gives more even drying in a shorter time.

## Hints

- Never tumble dry the following: Delicate items such as net curtains, woollen, silk, fabric with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdown, sleeping bags, feather quilts and any item containing rubber foam or materials similar to foam rubber.
- Do not place in your dryer undergarments such as bras and corsets that contain metal reinforcements. Your dryer may be damaged if metal parts were to come loose from the garment. Place such items in a bag designed for this purpose.
- Check and empty pockets. Clips, pens, nails and pins can damage both the dryer and your clothes. Other items such as matches or cigarette lighters will cause a fire.
- Close all press studs, hooks, eyes and zips that may catch on something else. Tie all belts and apron strings to prevent tangling.
- Drying time will depend on fabric type and construction, load size and wetness. Save time and money and always spin the load as dry as possible in your washing machine.
- The time will also be affected by voltage fluctuations, room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
- For best results, sort the load according to fabric types. Such as heavy items which may take longer to dry, eg towels, flannelette sheets etc, than ones which dry quickly, eg poly/cotton shirts and sheets.
- Avoid drying dark clothes with light coloured items such as towels as lint will show on the dark clothes.
- Easy-care items eg shirts, should be briefly pre-spun before drying (depending on the crease resistance approximately 30 seconds)
- Remove the laundry when the dryer has finished drying.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clothes or towels containing sand or grit should be washed first.

To help you, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000g
Tablecloth	400 - 500g
Kitchen towel	70 - 120g
Table napkin	50 - 100g
Towelling hand towel	150 - 250g
Bathrobe	1000 - 1500g
Men's shirt	200 - 300g
Pillowcase	100 - 200g
Men's pyjamas	400 - 500g
Ladies nightdress	200 - 250g
Bath towel	300 - 400g

**Note: Some fabrics will collect lint from other clothes and items. Separate the lint “givers” and the lint “collectors” to minimise this problem.**

Clothes that give lint include towels, nappies, chenille.  
Clothes that collect lint include corduroy, synthetics and permanent press garments.

- If individual items are still damp after drying, set a 30 minute post drying time. This will be necessary particularly for multilayered items (eg collars, pockets, etc).
- Always clean the lint filter-this will reduce drying time and save you money.
- The laundry must be thoroughly spun before tumble drying.



# Troubleshooting & Accessories

## TROUBLESHOOTING

Check the points listed here **before** you call for help, and **make sure that you have followed the Important Safety Instructions on pages 2 & 3.**

Problem	Possible cause
<b>The dryer will not start:</b>	<ul style="list-style-type: none"><li>• Plug is not firmly in socket, or power not turned on.</li><li>• You have blown a fuse. Check that power point with another appliance.</li><li>• You have not closed the dryer door or pushed in the door safety switch button.</li></ul>
<b>Your clothes are still wet:</b>	<ul style="list-style-type: none"><li>• The selected drying time was insufficient. Select a longer time setting.</li><li>• Longer time may be needed when the room temperatures is 10 °C or less.</li><li>• Check that the lint filter is not blocked.</li><li>• Check to see that you have read all the instructions carefully.</li><li>• Contact the Service Centre if you are still having problems. Write down the model and serial numbers and the date of purchase before you ring. The Service Centre will need this information.</li></ul>

### Important

To operate efficiently the clothes dryer must have an unrestricted air supply and exhaust ventilation.

**Service calls resulting from installation where ventilation is restricted are not covered by warranty.**

THE COST OF THIS TYPE OF CALL WILL BE CHARGED TO THE CUSTOMER

Should you require further instructions in the use and care of your clothes dryer please contact the CUSTOMER CARE CENTRE on the phone number listed below:

Australia....**1300 363 640 8 am to 7 pm EST & 8 pm EDST**  
Monday to Friday

NewZealand....**(09) 573 2384 8 am to 5 pm**  
Monday to Friday

If you have a warranty or spare parts enquiry you should call the number listed on page 10

## ACCESSORIES

You can buy both the venting kits and the stacking kit (as mentioned on page 4) from your local appliance shop or Electrolux Home Products Pty.Ltd.Spare Parts Distributor.

# Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: ELECTROLUX WASHING MACHINE

**This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.**

## General Terms and Conditions

- In this warranty
  - 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - 'Warranty Period' means
    - where you use the Appliance for personal, domestic or household purposes in Australia the period of '24' months and in New Zealand the period of '24' months;
    - where you use the Appliance for commercial purposes, in Australia the period of '3' months and in New Zealand the period of '3' months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
    - 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
- This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
- Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
- During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use reconditioned parts to repair your appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, lters or similar perishable parts.
- Parts and Appliances not supplied by Electrolux are not covered by this warranty.
- Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
- Proof of purchase is required before you can make a claim under this warranty.

- You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
  - The Appliance is damaged by:
    - accident
    - misuse or abuse, including failure to properly maintain or service
    - normal wear and tear
    - power surges, electrical storm damage or incorrect power supply
    - incomplete or improper installation
    - incorrect, improper or inappropriate operation
    - insect or vermin infestation.
  - The Appliance is modied without authority from Electrolux in writing.
  - The Appliance's serial number or warranty seal has been removed or defaced.
  - The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
- This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

## Limitation of Liability

- To the extent permitted by law:
  - Electrolux excludes all warranties other than as contained in this document;
  - The Appliance shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
- Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modied. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
  - in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
  - in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

## Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

## Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p><b>FOR SERVICE</b> or to find the address of your nearest state service centre in Australia <b>PLEASE CALL 13 13 49</b> <small>For the cost of a local call (Australia only)</small></p>	<p><b>SERVICE AUSTRALIA</b>  <b>Electrolux</b> ELECTROLUX HOME PRODUCTS <a href="http://www.electrolux.com.au">www.electrolux.com.au</a></p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in Australia <b>PLEASE CALL 13 13 50</b> <small>For the cost of a local call (Australia only)</small></p>
<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in New Zealand <b>FREE CALL 0800 10 66 10</b> <small>(New Zealand only)</small></p>	<p><b>SERVICE NEW ZEALAND</b>  <b>Electrolux</b> ELECTROLUX HOME PRODUCTS <a href="http://www.electrolux.co.nz">www.electrolux.co.nz</a></p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in New Zealand <b>FREE CALL 0800 10 66 20</b> <small>(New Zealand only)</small></p>



---

Product ..... Date of Purchase .....

Model ..... Serial Number .....

Purchaser's Name .....

Full Postal Address .....

.....

Retailer (Shop) .....

Address .....

*Please keep this book and your Proof of Date of Purchase to show the technician if you need service during the warranty period.*

[www.electrolux.com](http://www.electrolux.com)



**P/No.: 133356200**