



Instruction Book  
Mode d'emploi  
**PURE F9**



 




TW - [electrolux.com.tw](http://electrolux.com.tw)  
 KO - [electrolux.co.kr](http://electrolux.co.kr)  
 JA - [electrolux.co.jp](http://electrolux.co.jp)  
 CN - [electrolux.com.cn](http://electrolux.com.cn)  
 ID - [electrolux.co.id](http://electrolux.co.id)  
 TH - [www.electrolux.co.th](http://www.electrolux.co.th)  
 SG - [electrolux.com.sg](http://electrolux.com.sg)  
 MY - [electrolux.com.my](http://electrolux.com.my)  
 HK - [www.electrolux.com.hk](http://www.electrolux.com.hk)




Availability of Electrolux Webshop and Consumables & Accessories varies by region and country. Please refer to your local Electrolux website for more details or contact local customer service for support.

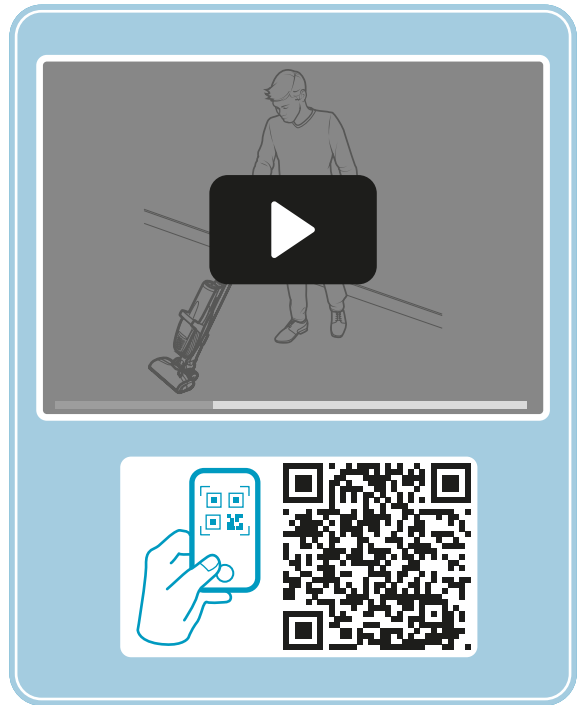


## CONSUMABLES & ACCESSORIES

 PUREF9 Performance Kit  
 Ref: ESPK9  
 Part nr: 9001690784




 3in1 Nozzle  
 Ref: ZE127  
 Part nr: 900922924/7



 Home & Car kit  
 Ref: KIT18  
 Part nr: 900922934/6




 Citrus Burst  
 Ref: ESMA  
 Part nr: 9001677807

 Evening Rose  
 Ref: ESRO  
 Part nr: 900167765




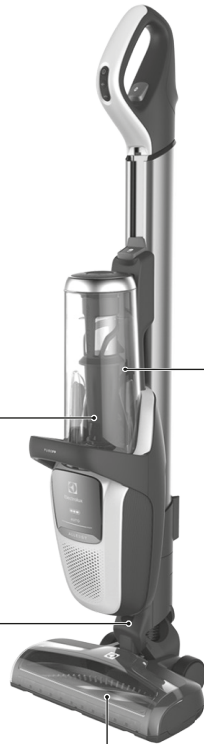 
 S-fresh 18 Value pack  
 Ref: ESVP1  
 Part nr: 9001681221








 Brush roll hard floor  
 Ref: ESBH9  
 Part nr: 9009229460




      Brush roll all-floors & carpet  
 Ref: ESBA9  
 Part nr: 9009229478



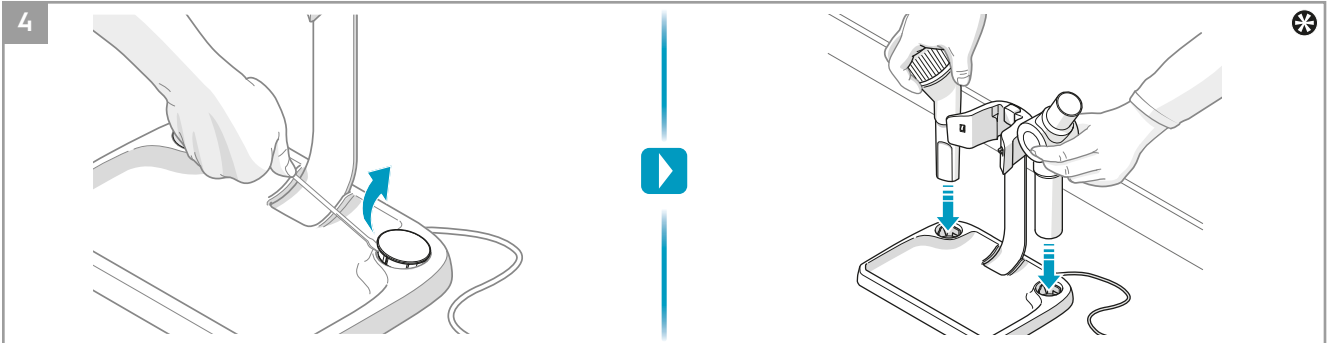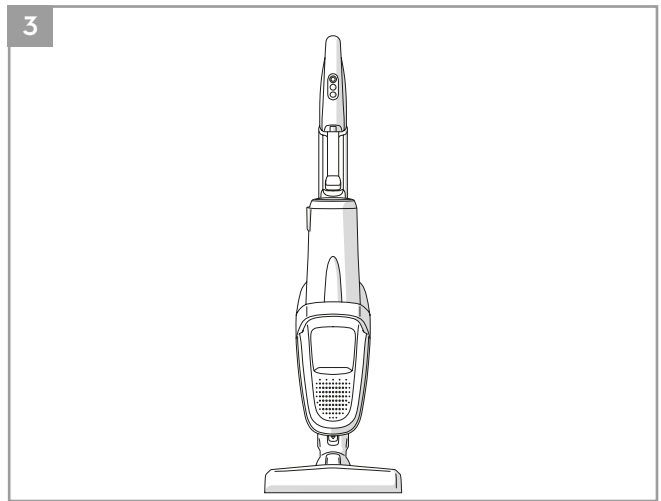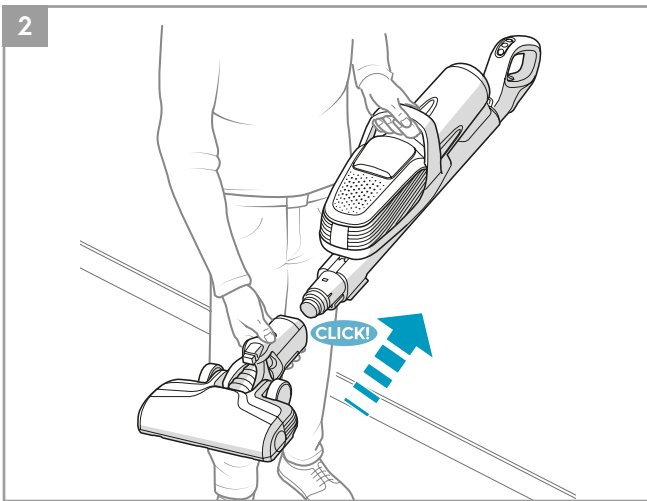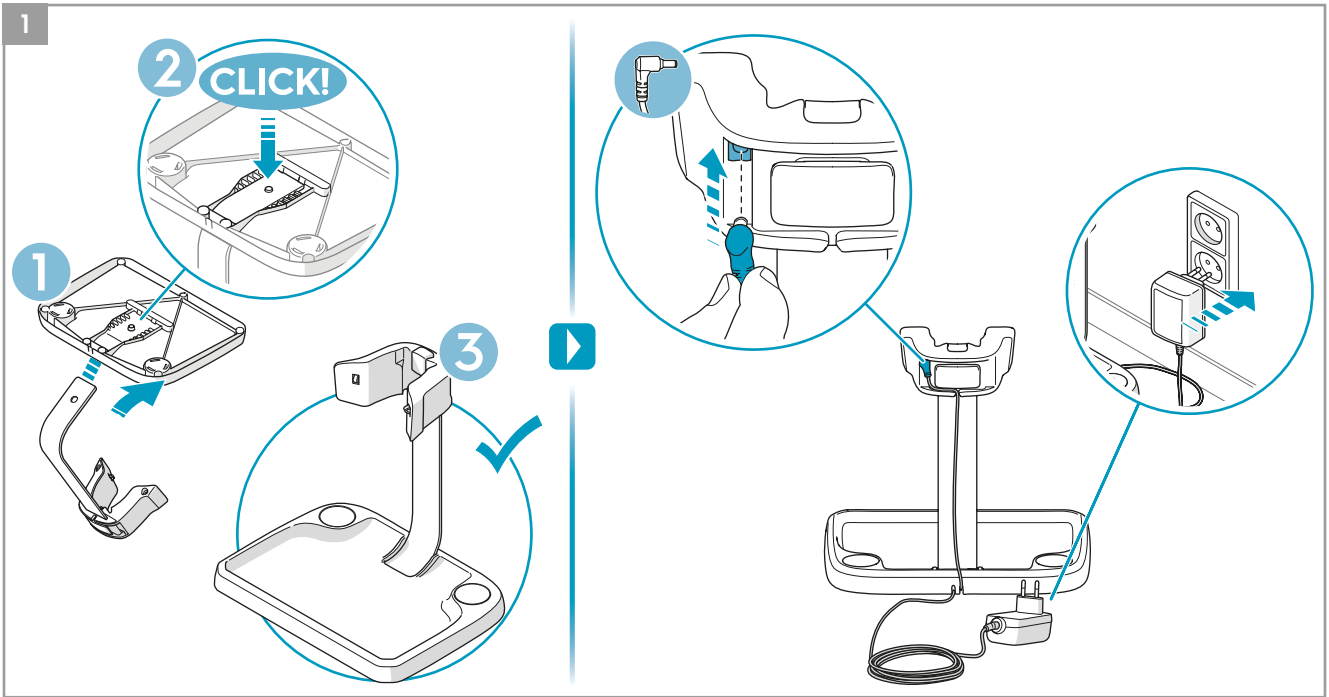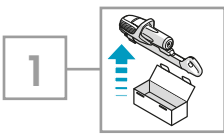





2

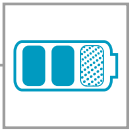 

1

### CHARGING

    충전방법  
 充電方法  
 การชาร์จแบตเตอรี่  
 產品充電指南  
 充电指南

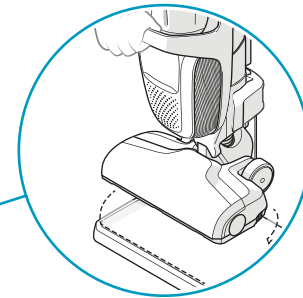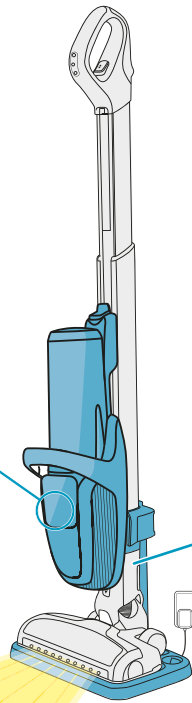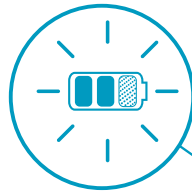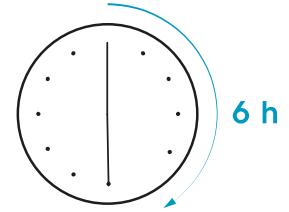




### BLINKS X 2

LED 등 2번 깜빡임  
 正しくセットされると2回点滅  
 LED กระพริบ 2 ครั้ง  
 LED燈閃爍兩次  
 闪烁2次

BLINKS x 2



   2

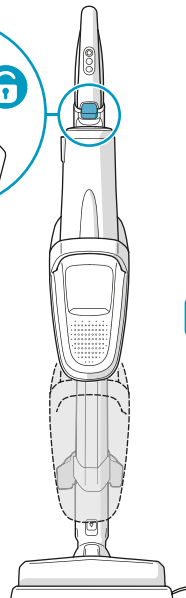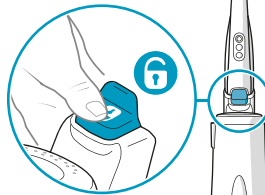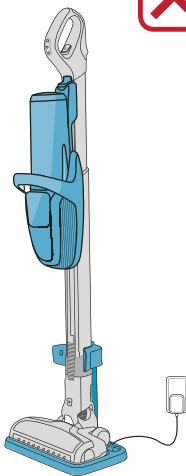

**PUSH DOWN**  
 본체를 아래로 내림  
 本体を下まで下げる  
 กดเลื่อนลง  
 向下推至底部  
 主机推到底部



**CLICK**  
 찰칵소리 확인  
 คลิ๊กลงล็อก  
 卡緊聲  
 卡住






BLINKS x 2



### NOT CHARGING

  
 
충전 되지 않음  
 本体が上部にあると充電されません  
 ไม่ได้กำลังชาร์จอยู่  
 未正確充電  
 未进行充电

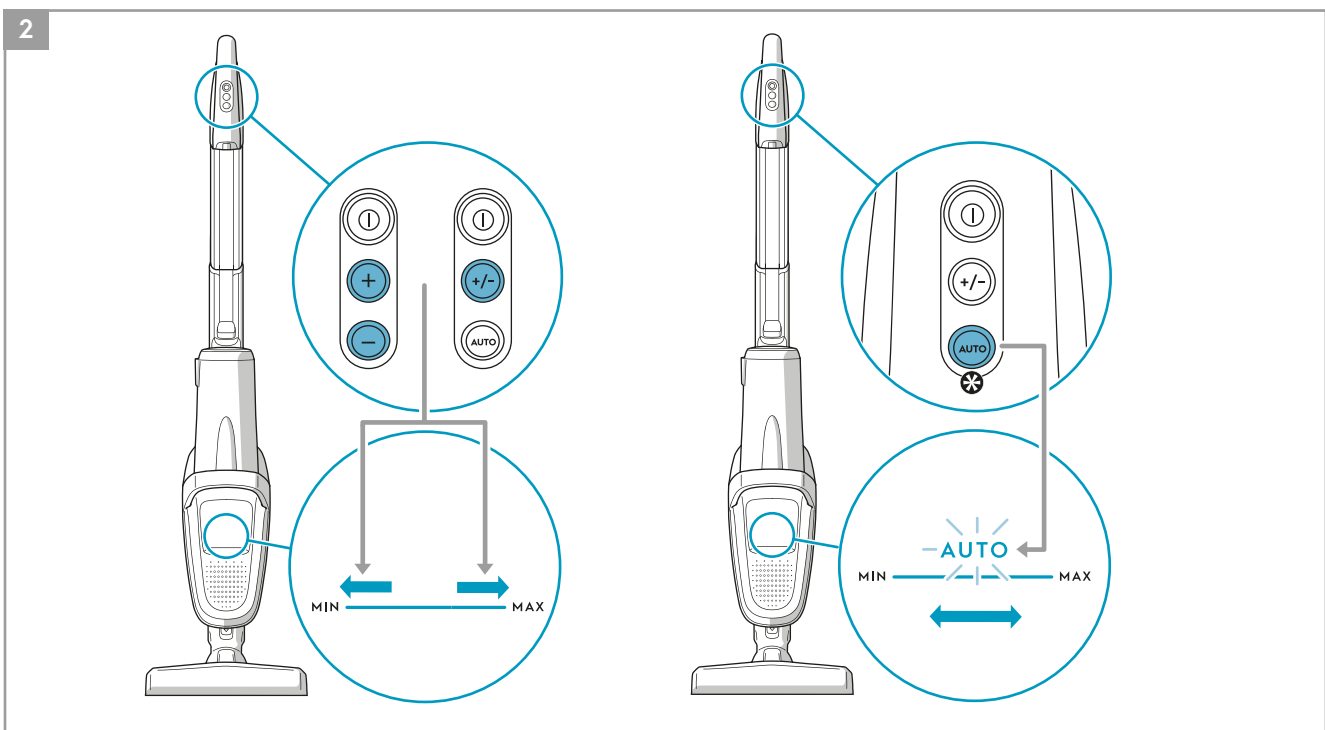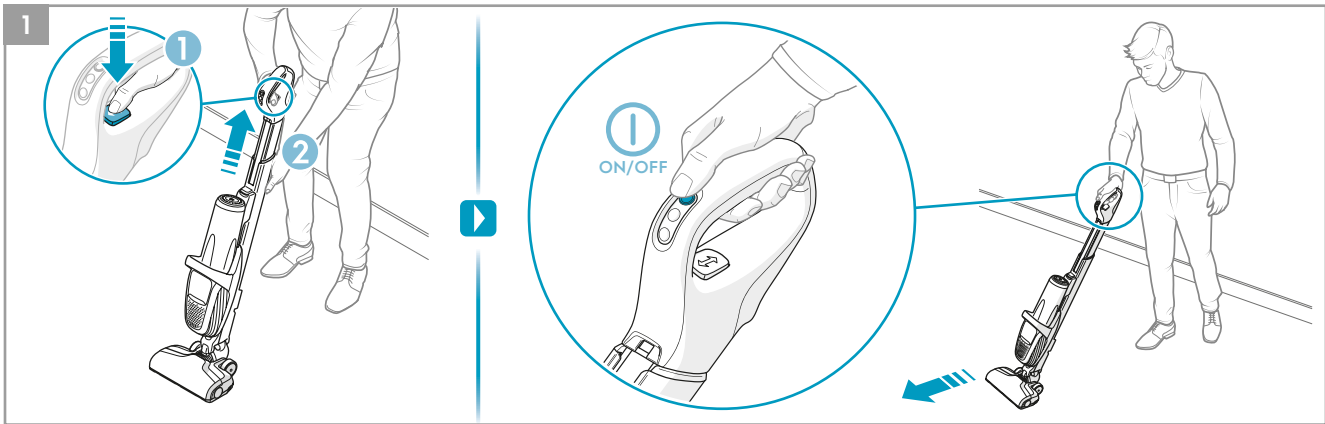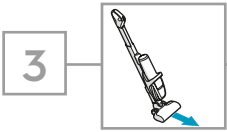


4













  1

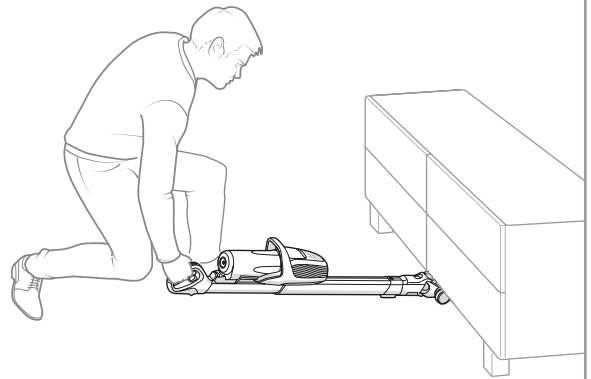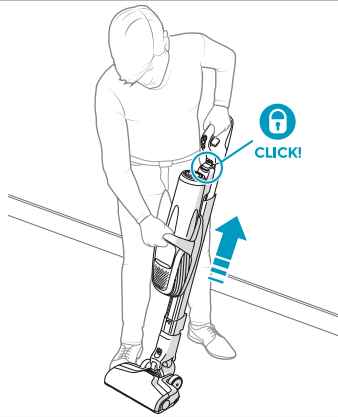

2

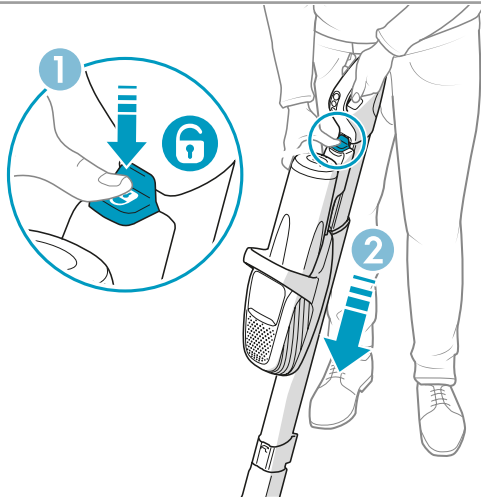 

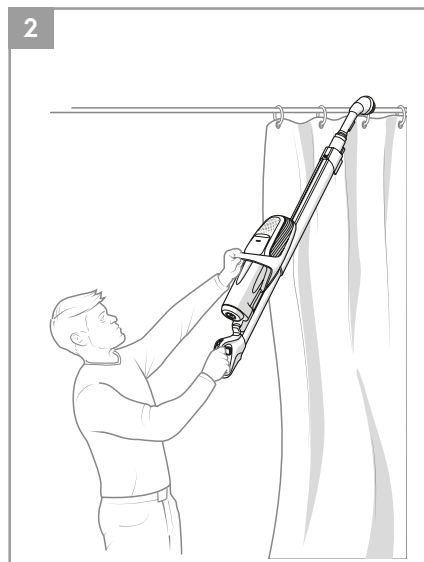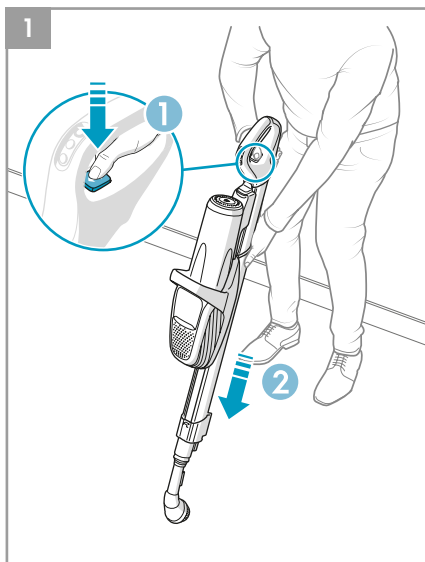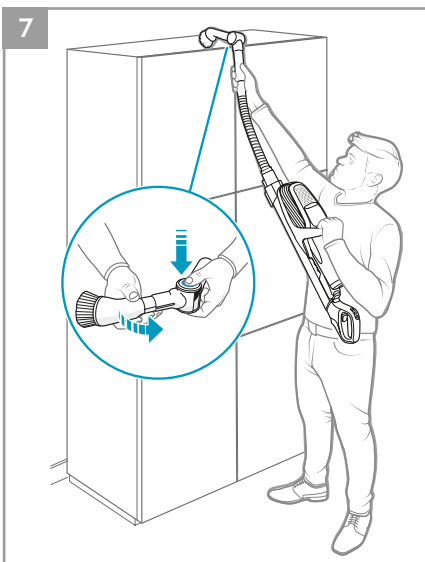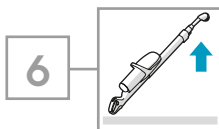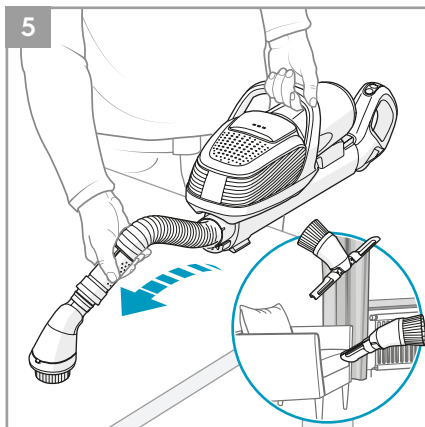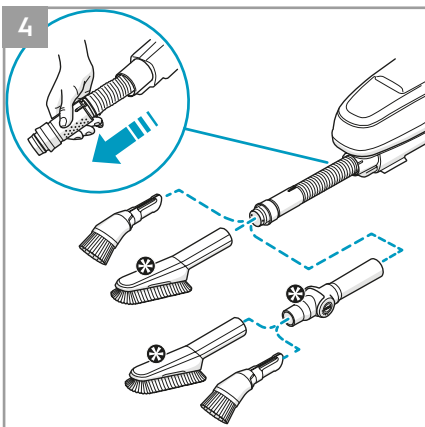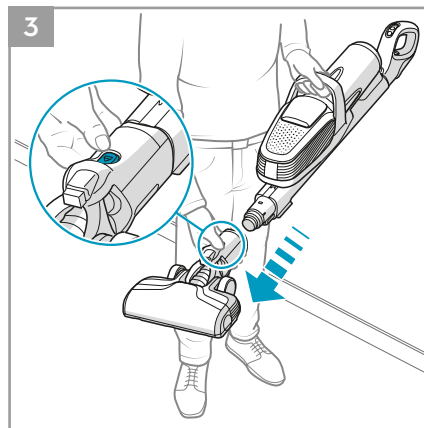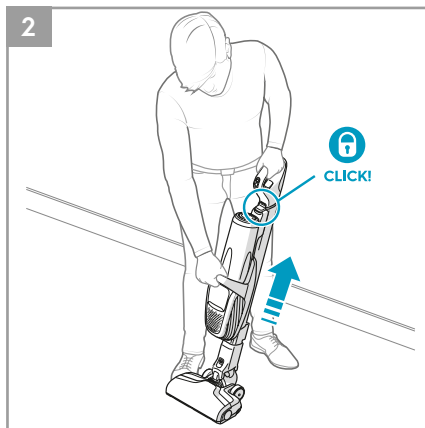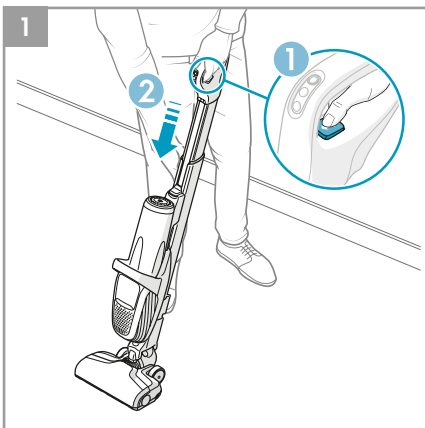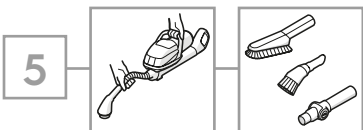          

\* Certain models only



