


# dimensions and installation guide


## electrolux modular refrigeration

**models** EBM5107SC, EBE5107BA\*, EBM4307SC, ETM5207SC, ETM4407SC, ERM407SC, EFM3607SC


**E-Line bottom mount fridge**  
EBM5107SC, EBE5107BA\*, EBM4307SC

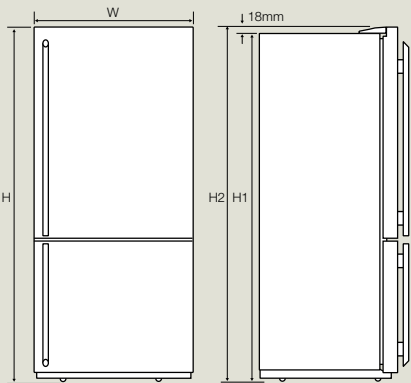


**E-Line top mount fridge**  
ETM5207SC, ETM4407SC

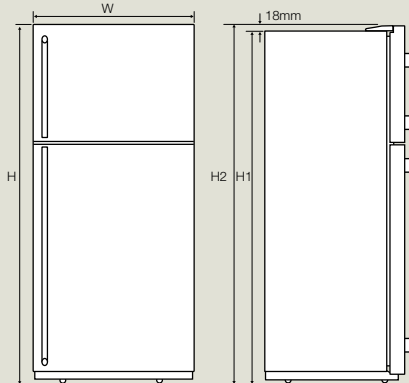


**E-Line single door**  
ERM4307SC, EFM3607SC

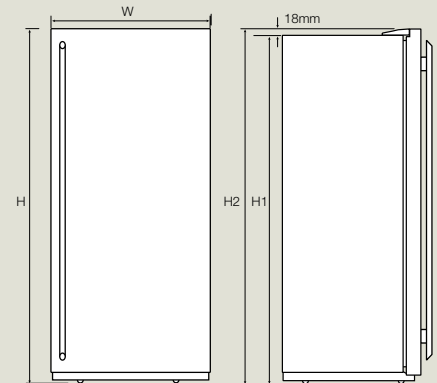



### Recommended Airspaces

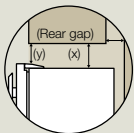

If you do not have a cupboard with a rear gap, the recommended clearance area on top increases from 50mm to 90mm (x) and from 32mm to 72mm (y).

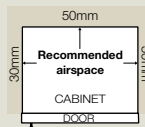

**Please note:** Doors are designed to sit proud of cabinetry (not flush).

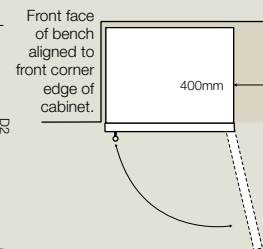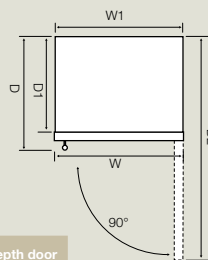

When positioned in a corner area, spacing of at least 400mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.




### Cabinet dimensions:

	max door height (H)	cabinet height (H1)	total height (H2)	door width (W)	cabinet width (W1)	total depth (D)	cabinet depth (D1)	depth door open (D2)
EBM5107SC	1720	<b>1702</b>	1720	800	<b>790</b>	745	<b>612</b>	1450
EBE5107BA*	1721	<b>1702</b>	1721	802	<b>790</b>	752	<b>612</b>	1451
EBM4307SC	1720	<b>1702</b>	1720	700	<b>690</b>	745	<b>612</b>	1350
ETM5207SC	1720	<b>1702</b>	1720	800	<b>790</b>	745	<b>612</b>	1450
ETM4407SC	1720	<b>1702</b>	1720	700	<b>690</b>	745	<b>612</b>	1350
ERM4307SC	1720	<b>1702</b>	1720	700	<b>690</b>	683	<b>550</b>	1270
EFM3607SC	1720	<b>1702</b>	1720	700	<b>690</b>	683	<b>550</b>	1270

\*EBE5107BA is not designed as part of the modular range.

**Important!** Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position.

### Joined dimensions

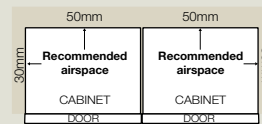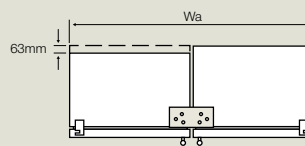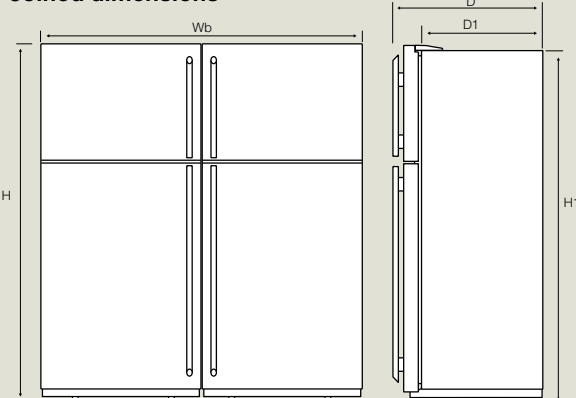

**Please note:** Doors are designed to sit proud of cabinetry (not flush).

### Joined cabinet dimensions:

individual cabinet widths (W1)		cabinet height (H1)	max door height (H)	joined cabinet width (Wa)	joined door width (Wb)	max total depth (D)	max cabinet depth (D1)
model 1	model 2						
790	790	1702	1720	1600	1612	745	612
790	690	1702	1720	1500	1512	745	612
690	690	1702	1720	1400	1412	745	612

For connection kit installation instructions go to [www.electrolux.com.au](http://www.electrolux.com.au)

### IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

All measurements in millimetres  
Current as at Sep 2009  
© 2009 Electrolux Home Products Pty Ltd. EIGMODFRI\_Oct09