


Dimension Guide


Top mount refrigeration

Models:


ETE5407SB, ETE4607SB

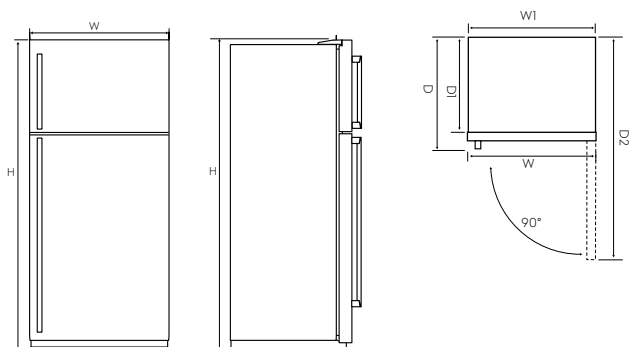


Minimum Recommended Airspaces

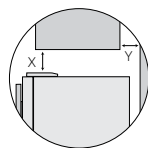

If you have a cupboard above the refrigerator with a rear gap of less than 100mm (Y), recommended minimum clearance at the top of the refrigerator increases from 30mm to 70mm (X).

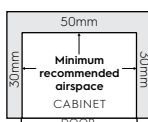

Please note: Doors are designed to sit proud of cabinetry (not flush).

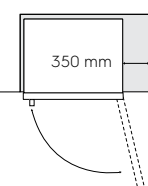


When positioned in a corner area, spacing of at least 400mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Front face of bench aligned to front corner edge of cabinet.

Top Mount Models	Door width (W)	Total depth (D)	Maximum height (H)	Cabinet width (W1)	Cabinet depth (D1)	Depth door open (D2)
ETE5407SB	796	773	1725	790	641	1457
ETE4607SB	699	773	1725	693	641	1360

Modular refrigeration

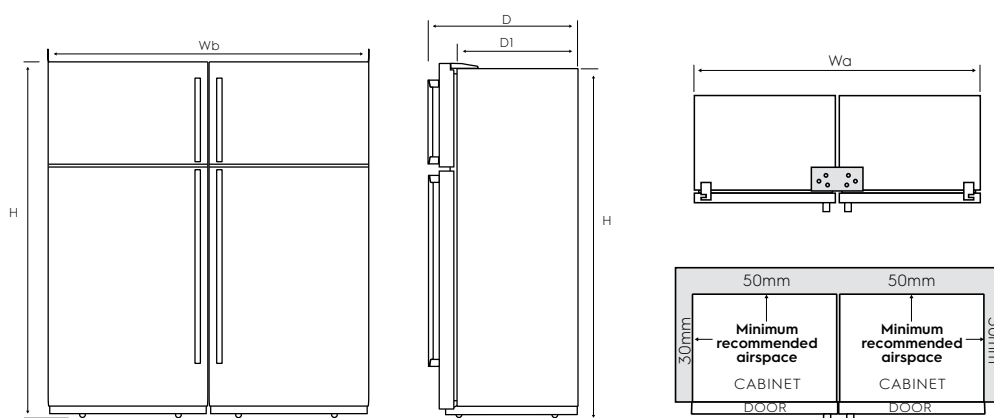

Please note: Doors are designed to sit proud of cabinetry (not flush).

Joined cabinet dimensions

individual cabinet widths (W1)		cabinet height (H1)	max door height (H)	joined cabinet width (Wa)	joined door width (Wb)	max total depth (D)	max cabinet depth (D1)
model 1	model 2						
693	693	1705	1725	1407	1419	773	641
693	790	1705	1725	1504	1516	773	641
790	790	1705	1725	1601	1613	773	641

For connection kit installation instructions go to electrolux.com.au

Important! Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position.

Please note! Dimensions to be used as a guide only. All customers MUST refer to the user manual supplied with the product for detailed installation instructions.

© 2019 Electrolux Home Products Pty Ltd. EDIM_TopMount_Jan19